


# TT-PFT-3/4-MC TT-PFT-3/4-SS/MC

## Pressure Feed-Through Fitting

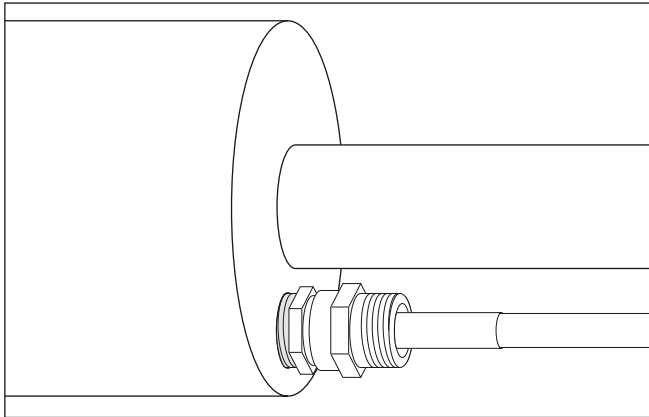

### Description

The TraceTek TT-PFT-3/4-MC (brass) and TT-PFT-3/4-SS/MC (stainless steel) are feed-through fittings used to transition through containment systems. They are suitable for NEMA 4 environments and are rated for continuous exposure to 150 psi containment pressure.

### Tools Required

- 12-inch adjustable wrench
- Heat gun (Ultratorch) or flameless heating tool


### Additional Materials Required

- Teflon sealing tape


### Kit Contents

| Item | Qty | Description                     |
|------|-----|---------------------------------|
| A    | 1   | PFT body (non-containment side) |
| B    | 1   | PFT nipple (containment side)   |
| C    | 1   | PFT bulkhead connector          |
| D    | 2   | Heat-shrinkable tube            |


A

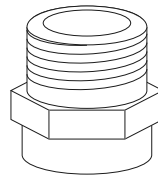


D

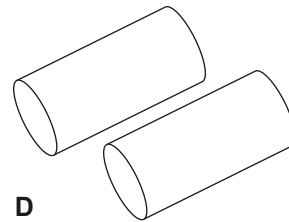

B

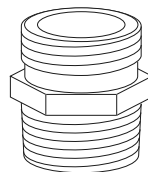

C

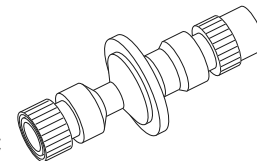

#### Note:

- Follow all installation instructions carefully.
- Do not use pipe dope, it may contaminate the sensing cable.
- Do not substitute kit parts.
- Investigate leaks immediately.

#### Note:

- In acidic environments, the TT-PFT-3/4-MC should be replaced in the event of a leak.




**WARNING:** Overheating heat-shrinkable tubes will produce fumes that may cause irritation. Use adequate ventilation and avoid charring or burning. Consult MSDS RAY3122 for further information.

**TT-PFT-3/4-MC and TT-PFT-3/4-SS/MC Pressure Feed-through Fittings  
Installation Instructions**


**Note: Factory recommended mounting positions are top and side only**

1

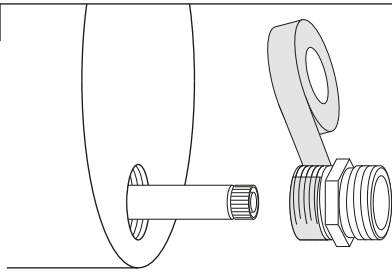


Wrap Teflon tape around the 3/4 inch NPT thread of the PFT nipple. Be sure not to confuse the NPT threads with the coarser hose threads. Do not use pipe dope.

2

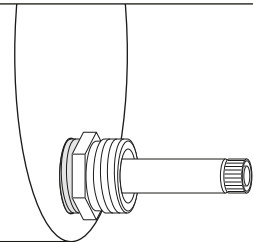


Pull the end of the sensing cable out of the containment. Slip the PFT nipple over the sensing cable, NPT threads first. Using

3

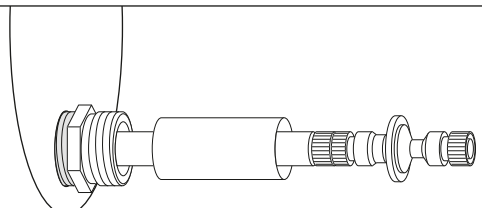


Slip the heat-shrinkable tube over the sensing cable. Connect the sensing cable to the end of the bulkhead connector. NOTE: The bulkhead connector has both pin and socket ends. Use the end that mates to the sensing cable. (The bulkhead connector will fit into the PFT body in either orientation).

4

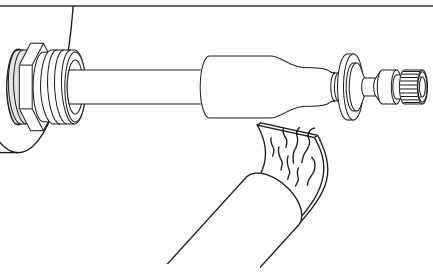


Shrink the heat-shrinkable tube over the mated connectors using a flameless heating tool. Do not cover the large diameter area of the PFT bulkhead connector with the tube. Be careful not to burn the bulkhead connector body.

5

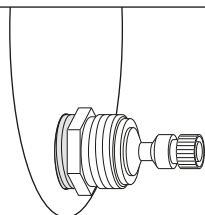


Seat the bulkhead connector in the PFT nipple.

6

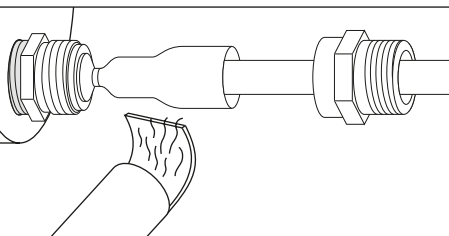

Prepare the connecting jumper cable or sensing cable by slipping the PFT body over the connecting cable, NPT threads first. Slip the second heat-shrinkable tube over the connecting cable. Connect the outside cable to the bulkhead connector. Shrink the tube over the mated connection.

7

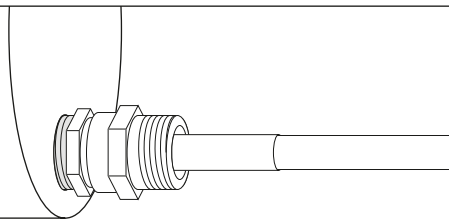

Hand tighten the PFT body onto the PFT nipple. Finish tightening with a wrench 1/6 turn (do not over-tighten). Jumper cable to be installed per local codes. If a junction box is used, fasten the PFT body to the junction box with a 3/4 inch lock nut.

**Tyco Thermal Controls, LLC**  
**Commercial & Industrial**  
**Infrastructure Division**

**300 Constitution Drive**  
**Menlo Park, CA 94025-1164**

**REPRESENTED BY:**

**INDUSTRIAL HEATER**  
**8400 Wolf Lake Dr.**  
**Suite 116**  
**Bartlett, TN 38133**

**Tel (888) 451-4328**  
**Fax (901) 382-4766**

1  
2  
3  
4  
5  
6  
7  
8  
9